



132-114



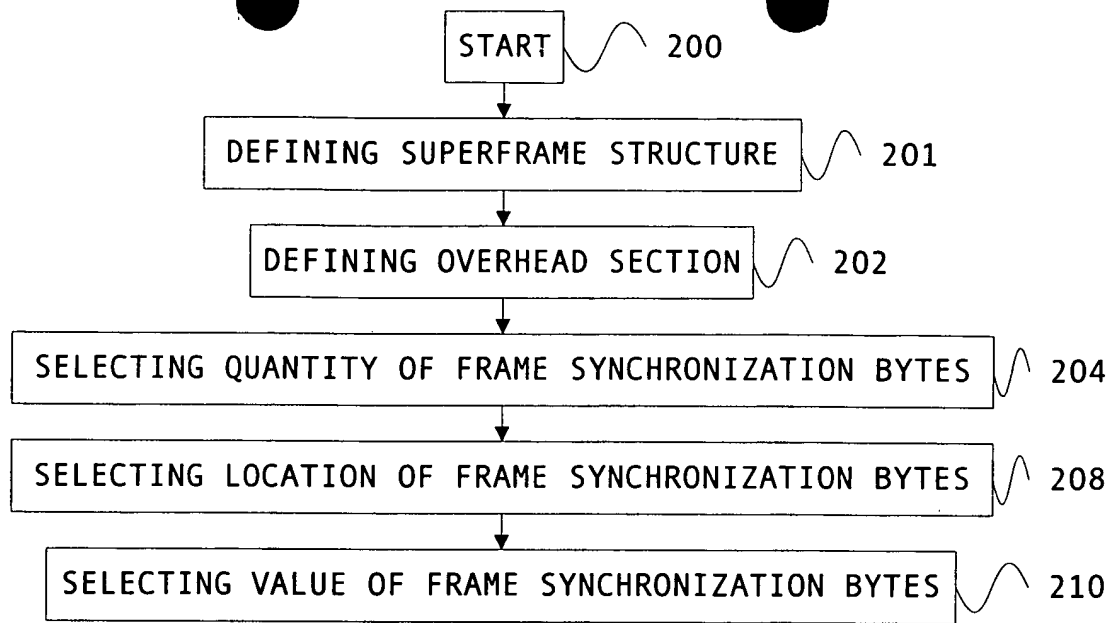


FIG. 3

START 300

SELECTING QUANTITY OF FRAME SYNCHRONIZATION BYTES 302

SELECTING LOCATION OF FRAME SYNCHRONIZATION BYTES 303a

SELECTING VALUE OF FRAME SYNCHRONIZATION BYTES 303b

SENDING FRAME 304

RECEIVING FRAME 306

SELECTING NUMBER OF FRAMES 307a

SELECTING QUANTITY OF FRAME SYNCHRONIZATION BYTES 307b

SELECTING BIT ERROR RATE 307c

SELECTING LOCATION OF FRAME SYNCHRONIZATION BYTES 307d

SELECTING VALUE OF FRAME SYNCHRONIZATION BYTES 307e

SYNCHRONIZING RECEIVED FRAME 308

SELECTING NUMBER OF FRAMES 309

FALLING OUT OF SYNCHRONIZATION 310

FIG. 4

00000001 2579750

 


Fig. 5

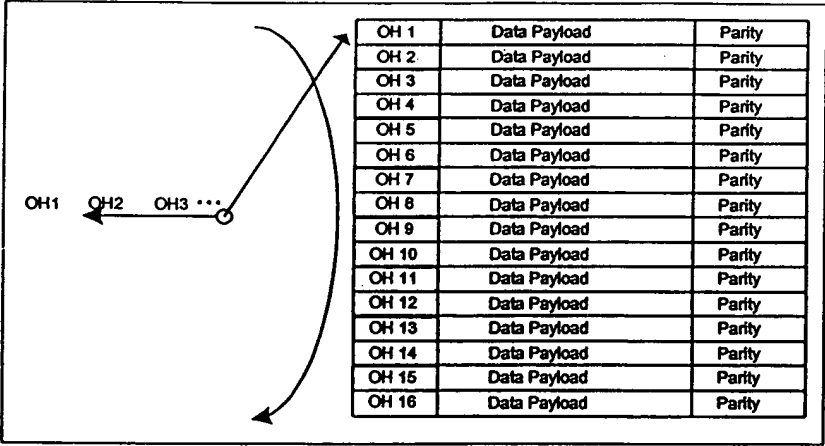


Fig. 6